

HD4111 MPEG4 Modulator Quick Setup

IP Address 192.168.1.138 Login User: admin Password: admin

USER: admin
Logout

Channel Setting

Channel Setting
Mail Setting
System Setting
Save Config
Upload

Store Setting & Reboot System

	TS1	TS2	TS3	TS4
Area:	08-AUSTRALIA	08-AUSTRALIA	08-AUSTRALIA	08-AUSTRALIA
Frequency:	A06(177.5MHz)	A07(184.5MHz)	A08(191.5MHz)	A09(198.5MHz)
Output level:	100 dBuV	100 dBuV	100 dBuV	100 dBuV
Constellation:	64QAM	64QAM	64QAM	64QAM
Carrier:	8K	8K	8K	8K
Code Rate:	3/4	3/4	3/4	3/4
Guard Interval:	1/8	1/8	1/8	1/8
Bitrate:	10.664 Mbps	10.664 Mbps	10.664 Mbps	10.664 Mbps
Resoltuon:	1080P	1080P	1080P	1080P
	Save	Cancel		

	TS1	TS2	TS3	TS4
Service name:	TV-101	TV-102	TV-103	TV-104
Service ID:	256	257	258	259
LCN:	256	257	258	259
PMT PID:	4096	4097	4098	4099
Video PID:	2000	2001	2002	2003
Audio PID:	2256	2257	2258	2259
Network name:	DIGITAL-TV1	DIGITAL-TV2	DIGITAL-TV3	DIGITAL-TV4
Network ID:	1009	1010	1011	1012
ONID:	1009	1010	1011	1012
TS ID:	32	33	34	35
KEY ID:	2	2	2	2
	Save	Cancel		

All the parameters can be set from the 1 page. Please press **SAVE** on each section when adjustment is done

USER: admin

[Channel Setting](#)
[Mail Setting](#)
[System Setting](#)
[Save Config](#)
[Upload](#)

System Setting

Version: 3D009-R9-10
Build Date: Apr-16-2018

IP Address: . . .
IP Mask: . . .
Gateway: . . .
DNS: . . .

Reset Mode:

Send Mail:
Send mail interval:

If your Modulator is on a local network, set the IP range to IP address, IP MASK, Gateway and DNS to suit your network. This will give the Modulator access to the network so it can send emails if one of the power supplies fails. You need to **ENABLE** this feature and have 2 power supplies connected for it to work.

Don't forget to press **SAVE** after you make changes.

USER: admin

Channel Setting
Mail Setting
System Setting
Save Config
Upload

Mail Setting

SMTP Server(32):

From(48):

To(48):

User(48):

Password(48):

Password again:

Subject(128):

Message(200):

Send the destination **email address**, **Message Subject** and **Message** on this page
Press **SAVE** after changes.

USER: admin

Logout

Channel Setting

Mail Setting

System Setting

Save Config

Upload

Store Setting & Reboot System

Save Config

Save Config:

Your configuration can be saved to your PC here

USER: admin

Logout

Channel Setting

Mail Setting

System Setting

Save Config

Upload

Store Setting & Reboot System

Upload

No file selected.

The saved configuration can be loaded back into the Modulator on this page.

When finished all adjustment press **Store Settings and Reboot System** to save them permanently.