


# Quick Setup for SD4250 Quad Digital Modulator

The SD4250 comes with Network Management software on the USB stick provided in the box.


Insert the USB stick into your PC and run the software NMS\_CN4.87

A login screen will appear, Username is **admin** Password is **admin**


You will need to add a frequency node. Click on **Add Freq Node**.

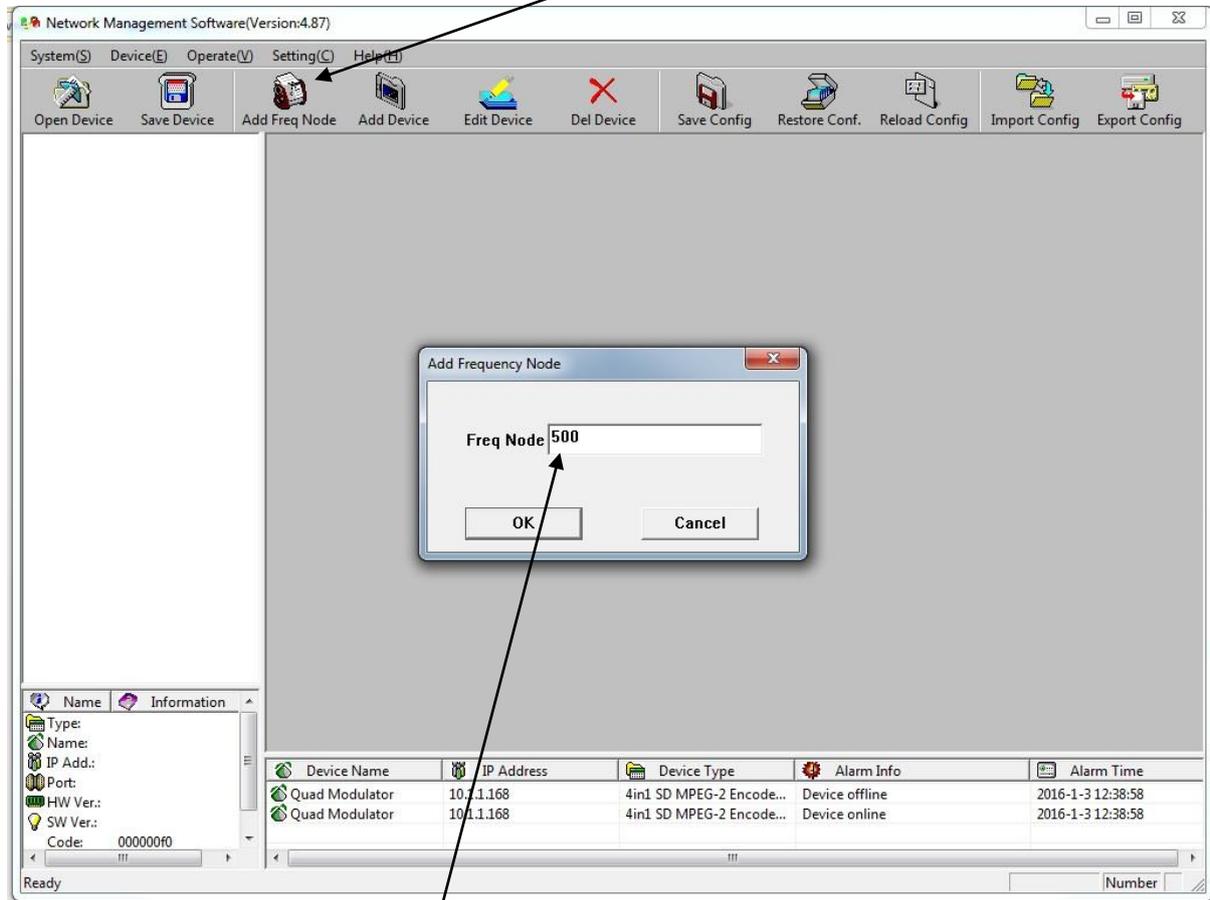

Type any frequency in the box say **500**. Click on OK

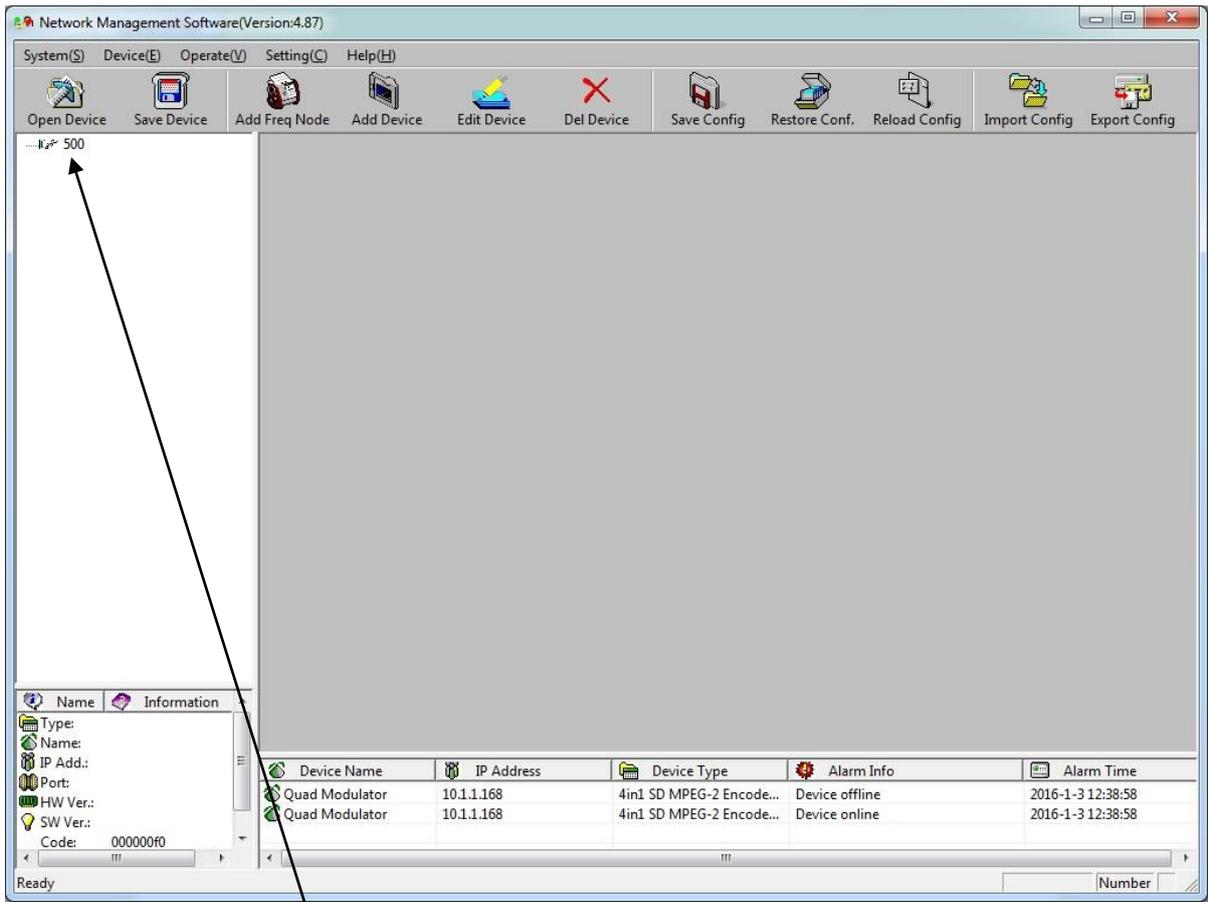


A Frequency Node will appear. Right click on this node. Click **Add Device**.  
 Select **4 in 1 SD MPEG-2 Encoder with DVBT** from the dropdown.

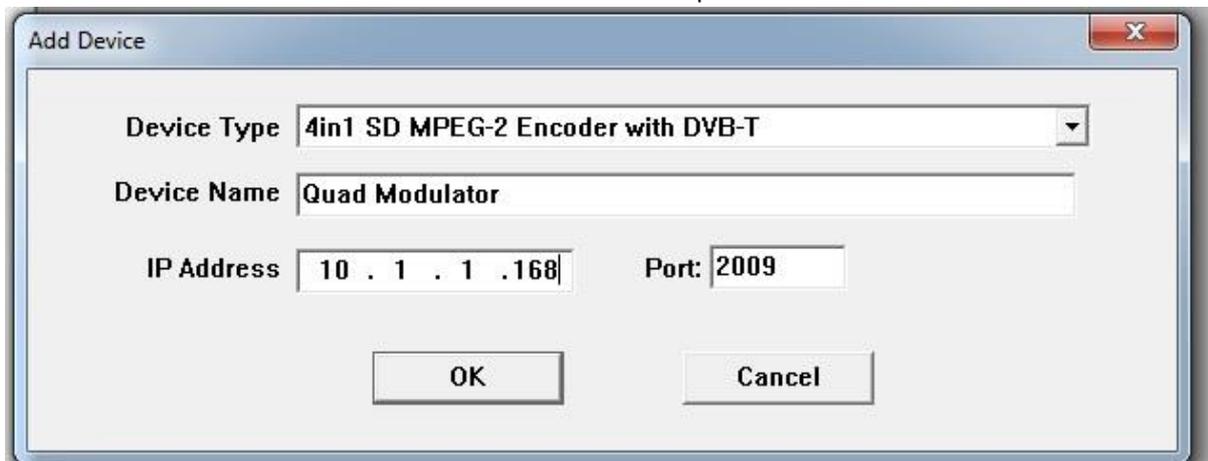


Select a device name say Quad Modulator. Insert the IP address. This needs to be the IP address found on the front LCD screen of your modulator. This IP address should be set to the IP address range of your PC. The port number is always 2009. Click OK. The Quad Modulator will appear under the Frequency Node.

Double click on the Quad Modulator and the parameters will appear.  
Click on Get to get the parameters from the Modulator.

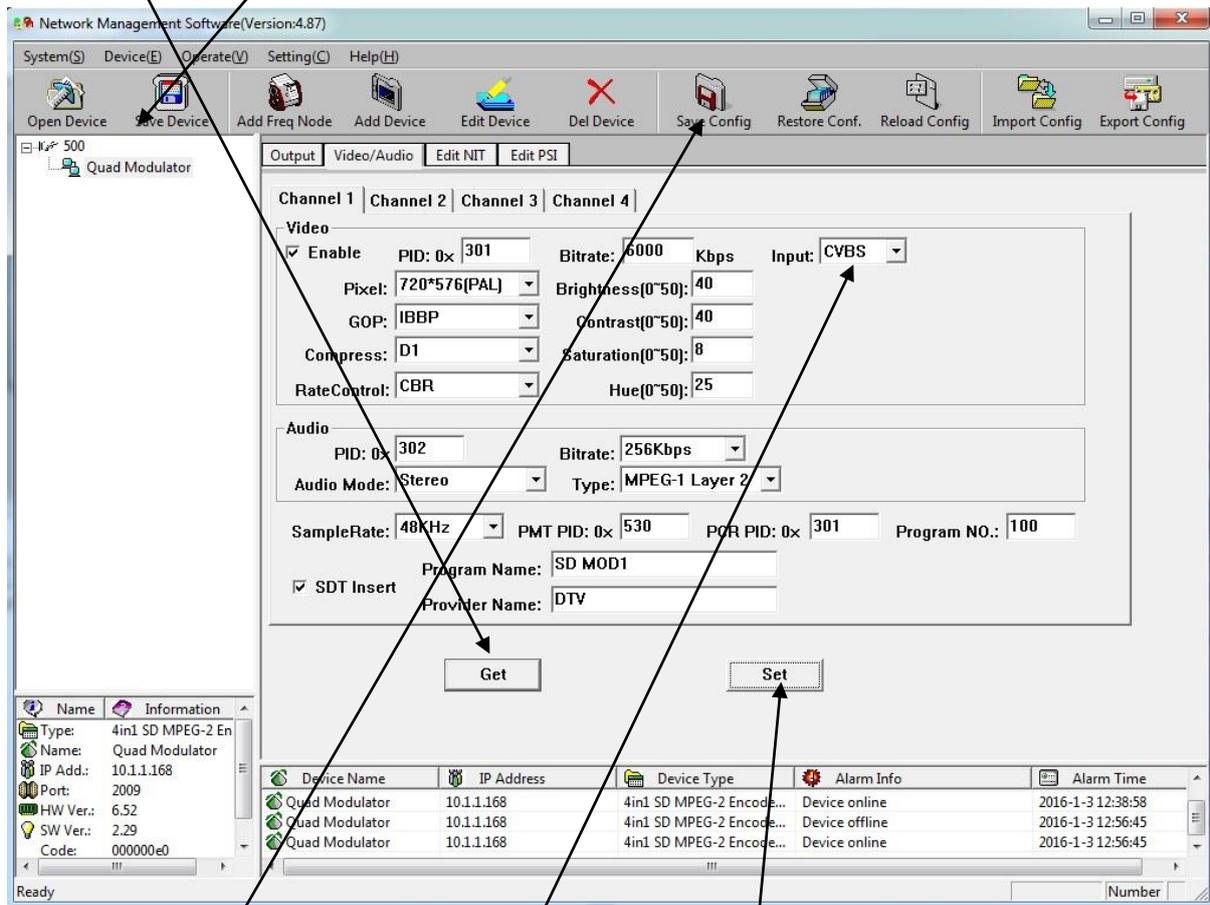

On each channel you can select YPbPr or CVBS inputs. The Brightness, Contract and Saturation can be set for each channel. We recommend 40, 40 and 8 for these settings. The LCN is easily set from the front LCD display under **Stream-> LCN**  
Once you have set the parameters for each channel click on **Set** to set them then when all done click on **Save Config** to save to modulator.

The Frequency parameters are easily set on the first tab **Output**.

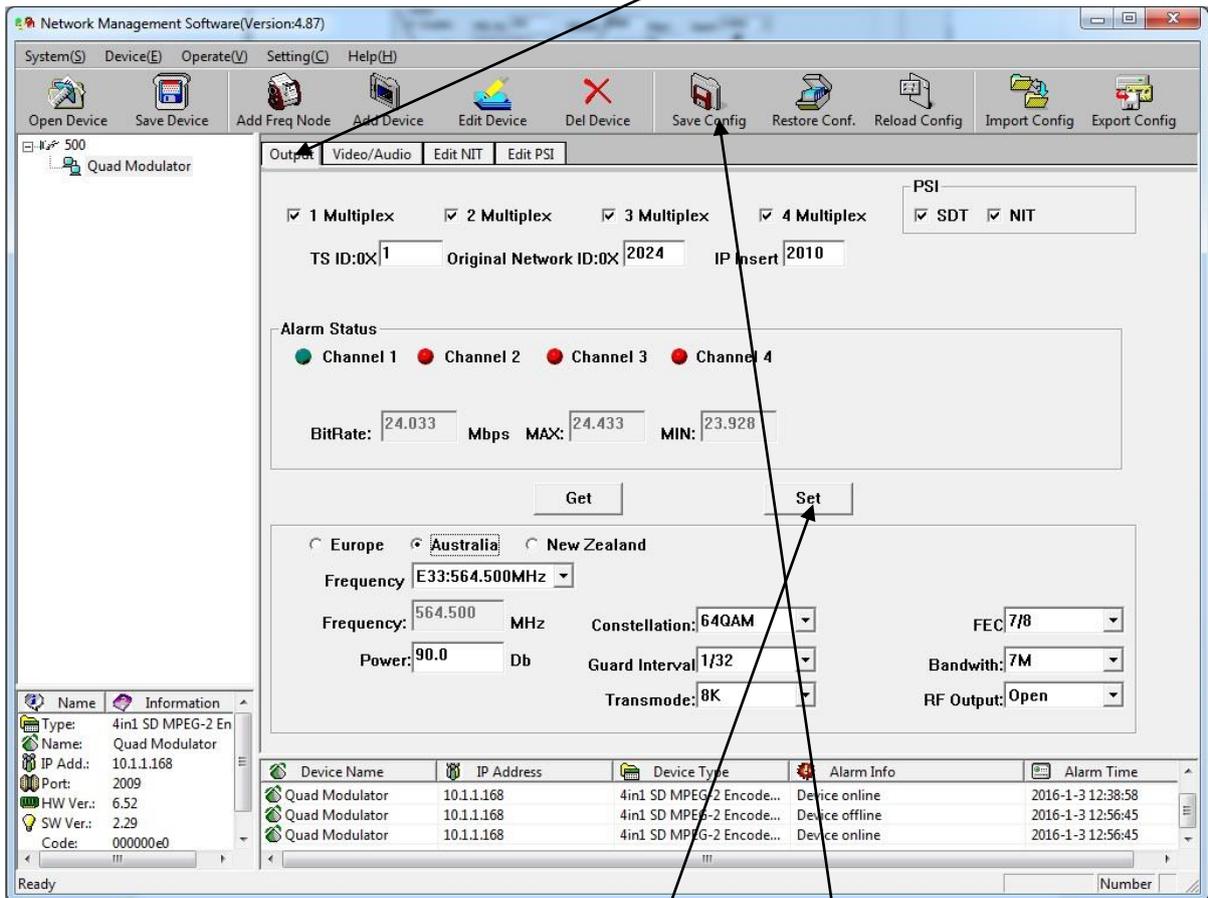

After you set Frequency and other parameters press **Set** then **Save Config**.